

MANUALE DI ISTRUZIONI
INSTRUCTION MANUAL



MANUALE DI ISTRUZIONI PER IMPIANTO AUDIO-VIDEO
CANTA TU KARAOKE CON WI-FI E TOUCH SCREEN
INSTRUCTION MANUAL FOR CANTA TU KARAOKE AUDIO-VIDEO SYSTEM
WITH WI-FI AND TOUCH SCREEN

MANUEL D'INSTRUCTIONS : CANTA TU KARAOKE, SYSTÈME
AUDIO-VIDÉO AVEC WI-FI ET ÉCRAN TACTILE

MANUAL DE INSTRUCCIONES PARA EL SISTEMA AUDIOVISUAL DE
KARAOKE "CANTA TÚ" EQUIPADO CON WI-FI Y PANTALLA TÁCTIL

MANUAL DE INSTRUÇÕES PARA O SISTEMA AUDIOVISUAL DE
KARAOKE "CANTA TÚ" EQUIPADO COM WI-FI E ECRÃ TÁCTIL

ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΓΙΑ CANTA TU KARAOKE ΣΥΣΤΗΜΑ ΗΧΟΥ-BINTEO ΜΕ WI-FI ΚΑΙ ΘΟΩΝΗ ΑΦΗΣ
WÍ-FÍ BAĞLANTILI VE DOKUNMATİK EKРАНLI CANTA TU KARAOKE
SES-VİDEO SİSTEMİ İÇİN KULLANIM KILAVUZU



IT - INQUADRA IL QR CODE PER VISIONARE I TERMINI DI UTILIZZO E SCARICARE LA VERSIONE PIÙ AGGIORNATA DI QUESTO MANUALE.

NOTA: il presente manuale d'uso è soggetto a costanti aggiornamenti e modifiche, è dunque necessario visionarne la versione più aggiornata e consultare la dichiarazione di Conformità e i Termini di utilizzo, inquadrando il QR code, o consultando il link: <https://giochipreziosi.it/condizioni-canta-tu/>
Allo stesso indirizzo è inoltre possibile visionare tutte le informazioni e le procedure relative al Servizio Assistenza.

EN - FRAME THE QR CODE TO SEE THE TERMS OF USE AND TO DOWNLOAD THE MOST UPDATED VERSION OF THIS INSTRUCTION MANUAL.

NOTE: This manual is subject to constant changes and revisions, for this reason is necessary to check the most updated version, consult the Declaration of Conformity and the Terms of Use, framing the QR code, or visiting the website:
<https://giochipreziosi.it/condizioni-canta-tu/>

FR - FLASH LE QR CODE POUR VOIR LES CONDITIONS D'UTILISATION ET POUR TÉLÉCHARGER LA VERSION LA PLUS RÉCENTE DE CE MANUEL D'INSTRUCTIONS.

REMARQUE : Ce manuel est sujet à des modifications et à des révisions constantes, c'est pourquoi il est nécessaire de vérifier les mises à jour les plus récentes. consultez la déclaration de conformité et les conditions d'utilisation, flash le QR code ou visitez le site Web :
<https://giochipreziosi.it/condizioni-canta-tu/>

Sur ce même site Web, toutes les informations et procédures relatives au service client sont également disponibles.

ES - ESCANEE EL CÓDIGO QR PARA CONSULTAR LAS CONDICIONES DE USO Y DESCARGAR LA VERSIÓN MÁS ACTUALIZADA DE ESTE MANUAL DE INSTRUCCIONES

NOTA: Este manual está sujeto a constantes cambios y revisiones, motivo por el que es recomendable consultar la versión más actualizada, así como la declaración de conformidad y las condiciones de uso, escaneando el código QR o accediendo a la web <https://giochipreziosi.it/condizioni-canta-tu/>.
En la misma web encontrará toda la información y los procedimientos relacionados con el servicio de atención al cliente.

PT - DIGITALIZE O CÓDIGO QR PARA CONSULTAR OS TERMOS DE UTILIZAÇÃO E PARA FAZER DOWNLOAD DA VERSÃO MAIS ATUALIZADA DESTE MANUAL DE INSTRUÇÕES.

NOTA: Este manual está sujeito a constantes alterações e revisões, pelo que é necessário consultar a versão mais atualizada, bem como a Declaração de Conformidade e os Termos de Utilização, digitalizando o código QR ou então accedendo ao site:
<https://giochipreziosi.it/condizioni-canta-tu/>

No mesmo site estão também disponíveis todas as informações e procedimentos relacionados com o Serviço de Apoio ao Cliente.

EL - ΣΑΡΩΣΤΕ ΤΟΝ ΚΩΔΙΚΟ QR ΓΙΑ ΝΑ ΔΕΙΤΕ ΤΟΥΣ ΟΡΟΥΣ ΧΡΗΣΗΣ ΚΑΙ ΓΙΑ ΝΑ ΚΑΝΕΤΕ ΛΗΨΗ ΤΗΣ ΠΙΟ ΕΝΗΜΕΡΩΜΕΝΗΣ ΕΚΔΟΣΗΣ ΑΥΤΟΥ ΤΟΥ ΕΓΧΕΙΡΙΔΙΟΥ ΟΔΗΓΙΩΝ.

ΗΜΕΙΩΣΗ: Αυτό το εγχειρίδιο υπόκειται σε συνεχείς αλλαγές και αναθεωρήσεις, για τον λόγο αυτό είναι απαραίτητο να ελέγχετε για πιο ενημερωμένες εκδόσεις, να συμβουλευέστε τη Δήλωση Συμμόρφωσης και τους Όρους Χρήσης, μέσω σάρωσης του κωδικού QR ή επισκεψών στον ιστότοπο: <https://giochipreziosi.it/condizioni-canta-tu/>

Στον ίδιο ιστότοπο είναι, επίσης, διαθέσιμες όλες οι πληροφορίες και οι διαδικασίες που σχετίζονται με την Εξυπηρέτηση Πελατών.

TR - KULLANIM KOŞULLARINI OKUMAK VE EN GÜNCEL KULLANIM KILAVUZUNU İNDİRMEK İÇİN QR KODUNU TARAYIN.

ÖNEMLİ: Bu kullanım kılavuzu sürekli değiştirilip revize edilmektedir, bu yüzden en güncel halini kontrol etmeniz ve Uygunluk Beyanıyla Kullanım Koşullarını okuyabilmeniz için QR kodunu tarayabilir ya da web sitemizi ziyaret edebilirsiniz: <https://giochipreziosi.it/condizioni-canta-tu/>
Web sitemizde aynı zamanda Müşteri İlişkileriyle ilgili bilgi ve prosedürleri bulabilirsiniz.



WARNINGS

Failure to comply with safety regulations and rules could lead to serious injury and death.

WARNING: This device is not a toy, it can be used by children aged 8 and up and by people with limited physical or mental abilities or with limited knowledge and experience, only if they have been instructed on how to use it and understand the risks and dangers involved.

People with limited physical or mental abilities or with limited knowledge and experience, or animals, could suffocate on swallowing small parts. Always supervise such individuals if they use the device or its accessories under your responsibility.

The use of original accessories, including the power cable and the battery charger, is essential to guarantee the correct functioning and safe use of the equipment, and also in order to avoid danger to people or things. The company explicitly declines any liability in the event of the equipment being used in ways that do not comply with the safety measures set out in these instructions.

Before using the product, read the instructions on its proper use carefully. Keep the instructions because they contain important information.

General Warnings

- **Magnets** - The equipment contains magnets. Make sure to keep a safe distance between the equipment and objects that might be affected by magnets, such as credit cards or implantable medical devices (e.g., pacemakers). If you are wearing an implantable medical device, ask your doctor before using the equipment. Do not store the equipment near magnetic fields.
- **Radio frequency** - If you are wearing a hearing aid, contact the manufacturer for information regarding radio frequency. Do not use the equipment near devices or systems that emit radio frequencies, such as sound systems or sound towers. Do not use the device in healthcare environments, on aircraft or automobile systems that might be affected by radio frequency interference.
- **Explosions** - Switch off the equipment in potentially explosive environments.
- **Safety rules in case of non-use of the equipment or thunderstorms** - If the equipment is not in use (even for a short time) or if there is a thunderstorm, unplug the power cable and the battery charger from the power socket. This safety measure is essential to avoid any risk of damage to the equipment, things or people, deriving, for example, from overheating, overvoltage or lightning.
- **Cleaning** - Do not use liquid or spray cleaners. Use a dry cloth to clean only the outside of the product.
- **Overload** - Do not overload power sockets, extension cords or built-in power sockets, as this may cause fire or electrocution.
- **Foreign bodies and liquids** - Do not insert any kind of object into the openings of the equipment, as it could come into contact with dangerous voltage points or short-circuit some components. This could cause fire or electrocution. Keep the equipment dry. Do not spill liquids on the equipment. Do not touch the equipment, power cables, plugs and power socket with wet hands or other body parts to avoid electrocution. Do not use the equipment outdoors during a thunderstorm.

- **Repairs and maintenance** - Do not attempt to carry out maintenance work yourself, as removing or opening covers could release dangerous voltages or create other risks. Allow maintenance work to be carried out by qualified technical personnel
- **Damage requiring maintenance** - Unplug the power plug from the power socket and contact Customer Service for assistance if the following situations occur:
 - a) if power cable or plug are damaged;
 - b) if liquids have been spilled or objects have fallen on the equipment;
 - c) if the product has been exposed to rain or water;
 - d) if the product was dropped or is damaged;
 - e) if the product performs significantly below standard.
- **Spare Parts** - Do not use power cables, damaged power plugs or loose power sockets. If spare parts are required, contact Customer Service for assistance and, in any case, make sure to use only original and undamaged spare parts, including the power cable and the battery charger. Using inadequate replacements may cause fire, electrocution or other risks.
- **Heat** - The equipment can be used in venues with ambient temperature between -10°C and 40°C. You can store the equipment at ambient temperature between -15°C and +40°C. Using and storing the equipment outside the recommended temperature limits may cause damage to the equipment, property, animals or people, or shorten battery life
- **Transport** - The equipment must not be dragged or used on sand or rough dirt and rough roads (ex. Stones, pebbles...).

Warnings for the usage environment

- The equipment may overheat due to different environmental conditions. Take care to avoid shortening battery life, causing damage to the equipment or fire.
- Do not store the equipment at either too low or too high temperatures.
 - In case you keep the device for in low temperatures for a long time, it is preferable to bring it back to a temperature of at least 15 before use, so that the performance is not affected.
 - Do not expose the equipment to direct sunlight for long periods of time.
 - Do not use and do not store the equipment for long periods of time in very hot areas, e.g., inside a hot car.
 - Do not place the device in areas that could overheat, such as a heating mat.
 - Do not store the equipment near heat sources, such as radiators, convection heaters, microwave ovens, hot cooking devices, high pressure containers or other products (including amplifiers).
 - Do not use cables, whose casing is either worn or damaged, and do not use damaged or malfunctioning chargers or batteries.
 - Do not use Canta Tu in a humid environment, and do not expose to salty environments.

Precautions against overheating the equipment

If you start feeling any discomfort due to the equipment overheating, stop using it.

In case of overheating, equipment function and performance may be limited or the equipment itself may shut down for cooling. The feature is only available on supported models.

- Screen brightness and performance speed will be reduced, and battery charging will be interrupted to lower equipment temperature. Until the equipment has cooled down, running applications will be closed and all functions will be limited.
- Do not use the equipment until its temperature falls below the specified level.

When the equipment overheats during use

When using more energy-intensive features or applications, or when using them for long periods of time, the equipment may temporarily overheat due to excessive battery consumption. Close any running applications and do not use the equipment for a while.

Please refer to the following examples of situations in which the equipment may overheat

- During initial configuration after purchase or data restoration.
- When downloading large files.
- When using more energy-intensive applications, or when using applications for long periods of time.
- When playing high resolution games for long periods of time.
- When streaming videos with brightness set to maximum.
- When connecting to a TV.
- When using a large volume of data when synchronizing with Cloud, email or other accounts.
- When using the equipment in areas with a weak signal or no signal at all.
- When charging the battery with a damaged cable.
- If the equipment's multifunction connector is damaged or exposed to foreign materials, such as liquids, dust, metal powders and pencil lead.

If the equipment overheats, adopt the following solutions:

- conflict between running applications may cause the equipment to overheat;
- restart the equipment;
- disable Wi-Fi and Bluetooth when not in use;
- close applications that increase battery consumption or run in the background when not in use;
- delete unnecessary files and unused applications;
- reduce screen brightness;
- if the equipment overheats or feels hot to the touch for an extended period of time, do not use it for a few minutes. If the equipment continues to overheat, contact Customer Service for assistance.
- Disconnect the charger from the equipment and close any running applications.
- Wait for the equipment to cool down, then resume charging.
- If the bottom of the equipment is overheated, the cause could be a damaged connection cable. Contact Customer Service for assistance.

When the equipment overheats while charging the battery

During charging, the equipment and charger may overheat. This does not affect the life or performance of the equipment and is part of its normal operation. If the battery gets too hot, the charging speed may decrease or the charger may stop charging.

Precautions when using the equipment

When using the equipment, read this Manual to ensure safe and correct use.

- The descriptions are based on the equipment's default settings. Do not change the registry settings or the operating system of the equipment. The manufacturer is not liable for performance problems or incompatibilities caused by changing registry settings or operating system software. Modifying the equipment's operating system or installing software from unofficial sources may cause the equipment to malfunction and data damage or loss.
- Handle the equipment and charger with care.
- Do not put the equipment, charger or supplied accessories in your eyes, ears or mouth.
- Do not connect the positive and negative poles of the charger directly to each other.
- Do not paint or stick stickers on the equipment or its accessories. Install the equipment and its accessories carefully.
- Do not pull too hard on the power cable when disconnecting it.
- Do not bend or damage the power cable during use or when storing it in the package.
- Do not drop the equipment or its accessories and avoid impact.
- Clean the equipment and its accessories only with a soft cloth and without detergents or chemicals.
- Do not expose the equipment or its accessories to dust, sand, sweat, ink, oil and chemicals, such as cosmetics, antibacterial sprays, hand cleaners, detergents and pesticides.
- Do not use the equipment or its accessories for purposes other than those intended.
- Avoid disturbing others (people or animals) when using the equipment in their presence.

Internet connection

- To allow full operation of the equipment, you need the availability of a connection to a Wi-Fi Internet network (including via mobile hotspot), which may incur additional costs depending on your tariff plan.
- If you are in areas with weak signal or poor reception, the equipment may not work. Connectivity problems could be due to problems with the telephone operator, especially if you use the equipment while travelling.

Malware and virus

- The equipment does not feature antivirus or anti-malware software.
- To protect your equipment from malware and viruses, please follow the usage tips given below to avoid the risk of causing damage or data loss:
- do not download unknown and non-certified applications;
- do not visit untrustworthy websites;
- if you access your inbox using this device, be careful to delete suspicious messages and emails from unknown senders;
- deactivate the Bluetooth function when not in use.

Data loss

- The manufacturer is not liable for any loss, damage or dissemination of data stored on the equipment or uploaded on the Internet via the equipment.
- The manufacturer is not liable for the loss, interception or misuse of data sent or received via the equipment.
- Protect personal data to prevent accidental loss or misuse of information that may be on the equipment.
- When using the equipment, be sure to back up data you consider important.
- When disposing of the equipment, back up all data, then reset the equipment to avoid misuse of your personal information.
- Always verify that you are sharing and receiving data from trusted and adequately protected sites and devices.
- Some applications may require the creation of personal accounts and/or access to or use of existing accounts in order to function properly. The manufacturer is not responsible for the content, mode of operation and performance problems of the applications, regardless of whether these applications are already loaded on the equipment or are subsequently downloaded by the user. The default applications supplied with the equipment are subject to updates and may no longer be supported without notice.
- If you do not create such accounts or do not grant permissions to the applications, the basic functions of the applications may not function properly.
- When downloading an application, carefully read the screen of required authorizations.
- Pay particular attention and caution to applications that require access to multiple equipment functions or personal information.
- Regularly check that your accounts are not subject to unauthorized access.
- In case of traces of unauthorized access to your personal information or accounts, contact your manager for any appropriate remedial action.
- In the event of loss or theft of your equipment, promptly change your account credentials.

Minora | Parental control

ATTENTION: With this device, you can set the parental control and manage the child's experience. You can limit the access to certain app, set the using time and other options, to guarantee a safe use of the device while entertaining the children.

Please follow this steps to set this option:

Settings --> Digital wellbeing & parental controls --> Set up parental controls

The equipment is not intended for minors, and must always be used by minors in the presence of a responsible adult. It is the sole responsibility of the user to monitor the proper use of the equipment by minors and to determine the need to block or restrict certain applications downloaded on the equipment.

It is recommended to enable parental control on the equipment via the appropriate App features, in order to:

- set content and privacy restrictions;
- prevent app or online purchases;
- limit the use of apps and built-in functions;
- limit apps and games;
- limit the time of use of the equipment by the minor (only for application use and Web access);
- prevent the vision of websites, playing music, films or TV programmes, with explicit or adult contents;

- control which apps have access to information on the equipment or hardware features;
- limit the content that can be downloaded or purchased on the equipment, considering the user's level of maturity.

MICROPHONE INFORMATION

General warnings

- **Magnets** - The microphone contains magnets. Make sure to keep a safe distance between the microphone and objects that might be affected by magnets, such as credit cards or implantable medical devices (e.g., pacemakers). If you are wearing an implantable medical device, ask your doctor before using the equipment. Do not store the equipment near magnetic fields.
- **Radio frequency** - If you are wearing a hearing aid, contact the manufacturer for information regarding radio frequency. Do not use the equipment near devices or systems that emit radio frequencies, such as sound systems or sound towers. Do not use the equipment in healthcare environments, on aircraft or automobile systems that might be affected by radio frequency interference.
- **Explosions** - Turn off the microphone in potentially explosive environments.
- **Cleaning** - Do not use liquid or spray cleaners. Use a dry cloth to clean the product.
- **Foreign bodies and liquids** - Do not insert any kind of object into the microphone, as this could come into contact with dangerous voltage points or cause a short circuit of some components. This could cause fire or electrocution. Keep the microphone dry. Do not spill liquids on the microphone. Do not touch the microphone with your hands or other wet body parts to avoid electrocution. Do not use the microphone outdoors during a thunderstorm.
- **Repair and maintenance** - Do not attempt to carry out maintenance work yourself, as removing or opening covers could release dangerous voltages or create other risks. Allow maintenance work to be carried out by qualified technical personnel.
- **Damage requiring maintenance** - Contact Customer Service for assistance if the following situations occur:
 - a) if liquids have been spilled or objects have fallen on the device;
 - b) if the product has been exposed to rain or water;
 - c) if the product is dropped or damaged;
 - d) if the product performs significantly below standard.
- **Heat** - The microphone can be used in locations with an ambient temperature between -10°C and 40°C. You can store the microphone at an ambient temperature of -15°C to + 40°C. Using and storing the microphone outside the recommended temperature limits could result in damage to the microphone, property, animals or people, or reduce battery life.

Information on batteries

Non-rechargeable batteries must not be recharged. Rechargeable batteries (if removable) must be removed from the product before recharging. Different types of batteries or new and used batteries must not be mixed. Do not try to open batteries. Do not throw batteries into a fire, they may explode or leak. Remove the batteries from the microphone if you intend to store it or not use it for a long time. It is the sole responsibility of the user to monitor the proper use of the equipment by minors and to determine the need to block or restrict certain applications and functions on the equipment.

Copyright

Copyright © 2023 Giochi Preziosi S.p.A.

- This Manual is protected by international copyright laws.
- No part of this Manual may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any information repository or retrieval system.
- The software, sounds, wallpapers, images, applications and other multimedia content supplied with the device are the property of the copyright holders. Downloading and using these materials for commercial or other purposes is a violation of copyright laws. Full responsibility for unlawful use of media content lies with the users.
- Do not distribute copyright-protected material through the device without the permission of its owners. This may constitute a violation of copyright laws. The manufacturer is not liable for any legal disputes arising from the use of copyrighted material by the user of the device.
- Do not use the Internet connection and Bluetooth® function for illegal purposes (e.g., pirate copies of files or illegal recording of communications for commercial purposes).
- The manufacturer is not liable for illegal use of the device.

Trademarks

- Giochi Preziosi® and "Canta Tu" are registered trademarks of Giochi Preziosi S.p.A.
- Bluetooth® is a worldwide registered trademark of Bluetooth SIG, Inc.
- Wi-Fi®, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance.
- YouTube® is a trademark owned by Google LLC.
- All other trademarks and copyrights are the property of their respective owners.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



INFORMATION FOR USERS OF ELECTRICAL APPLIANCES (DIRECTIVE 2012/19/EU): the symbol of the crossed-out wheeled bin indicates that the equipment at the end of its life is not general municipal waste and the consumer should take it to the special waste collection points in their municipality. The correct disposal of waste helps to avoid possible negative effects on the environment and health, and also promotes the reuse and/or recycling of the materials from which the equipment is made. For more information on special waste collection, please contact your local authorities.

Declaration of Conformity

The Manufacturer Giochi Preziosi S.p.A. declares that the type of radio equipment

CTC21000-CTC21100-CTC21200 CANTA TU KARAOKE

complies with Directive 2015/53/EU.

The full text of the EU Declaration of Conformity is published on the website: <https://giochipreziosi.it/condizioni-canta-tu/>

 
UK
CA



NOTE: This manual is subject to constant changes and revisions, for this reason is necessary to check the most updated version, consult the Declaration of Conformity and the Terms of Use, framing the QR code, or visiting the website: <https://giochipreziosi.it/condizioni-canta-tu/>
In the same website are also available all the information and procedures related to Canta Tu Customer Service.

For more information, please contact **Customer Service** on: www.famosa.es

RAPID GUIDE

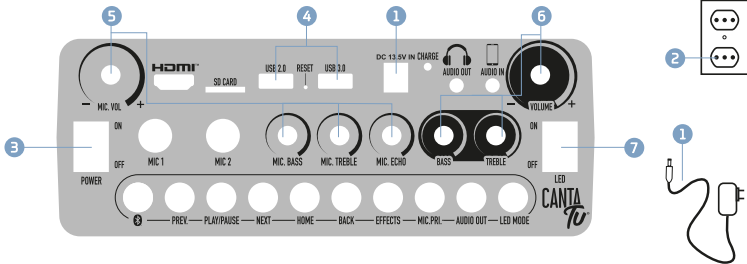

1- DC INPUT

To charge the Cantu Tu pro audio-video system, insert the socket of the battery charger included in the package here.

2- POWER SOCKET

Plug the battery charger into a power socket (100V-240V) and start the charging process. Check that the charger indicator is red: it means the equipment is being charged. It takes about 5 hours to fully charge the system. Once is fully charged, the light turns blue.

3- POWER ON/OFF

Press the switch to turn on (and then to turn off) the equipment.

4- USB/3.0 AND USB/2.0

Insert a flash drive into the USB port, you can select files from the screen or from the remote control.

5- MIC.VOL

Use the knobs to adjust mic volume, mic bass, mic treble and mic echo, as desired.

6- VOLUME

Use the knobs to adjust volume, treble and bass, as desired.

7- LED

Turn on the switch to start the multi-colour lights.

HOME PAGE

Cantu Tu settings icons are displayed on the Homepage. Use the UP/DOWN/RIGHT/LEFT buttons on the remote control to choose the desired function on the HOME PAGE, then press OK, or directly touch the icon on the screen and follow the instructions.

No Internet connection is needed for Bluetooth, AUX, USB Flash Drive and TF Card to work.


A WI-FI/Internet connection is required to run YouTube, Google Play and any other apps in the "My Apps" section.

TECHNICAL FEATURES:

SCREEN DIMENSION:	14.1"
SPEAKER POWER:	40W RMS
SPEAKER:	8" WOOFER, 2.5" MID, 2" TWEETER



 
CONTROL PANEL

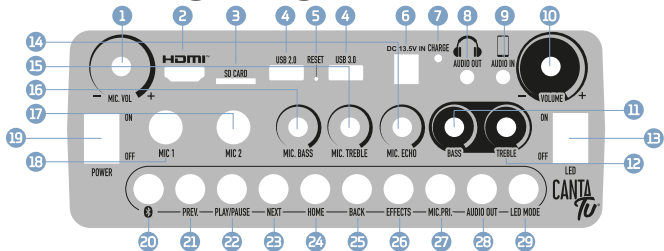

- 1. MIC VOL:** use this knob to adjust the microphone volume. Turn to the left to lower the volume, and to the right to raise it.
- 2. HDMI™ OUTPUT:** HDMI™ output allows to connect the Cantu Tu pro device to the TV.
- 3. SD CARD:** mini SD/TF card port. Insert a mini SD card/TF card to play audio and video files.
- 4. USB 2.0 and USB 3.0:** play audio/video files via USB media.
- 5. RESET:** use the RESET function to go back to factory functions. Insert a needle in the hole and simultaneously power on the Cantu Tu machine, then exit the needle. You will see on the screen a list of functions. Use the remote control to select Wipe data / factory reset. If you need further assistance contact the After Sales Service.
- 6. DC 13.5V in:** charging interface. Plug in the battery charger when the Cantu Tu pro audio-video system has a low battery level.
- 7. CHARGE:** charging indicator (it is red if the device is charging. The indicator light will automatically change to blue when charging is complete). Approximate charging time: 4-5 hours. It is recommended that the device should be charged using only the power cable and battery charger included in the box, or original spare parts in good condition.
- 8. AUDIO OUT:** audio output to connect another speaker/headphone with 3.5 mm AUX cable. It is suitable for connecting headphones.
- 9. AUDIO IN:** audio in to connect mobile/tablet with 3.5 mm jack 4 pole cable. After connecting, you can transmit the music from your device to the machine for playback, or record the music played by the machine and the sound from the microphone into your device.
- 10. VOLUME:** use this knob to adjust the main volume. Turn to the left to lower the volume, and to the right to raise it.
- 11. LED:** press ON to turn on the lights, and OFF to turn them off.
- 12. TREBLE:** use this knob to adjust the volume of the TREBLE. Turn it to the left to lower the volume, or to the right to raise it.
- 13. BASS:** use this knob to adjust the volume of the BASS. Turn it to the left to lower the volume, or to the right to raise it.
- 14. MIC.ECHO:** use this knob to adjust the ECHO effect of the microphone. Turn to the left to reduce it, and to the right to increase it. (Useful only when using the microphone).
- 15. MIC.TREBLE:** use this knob to adjust the TREBLE of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).

- 16. MIC.BASS:** use this knob to adjust the BASS of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).
 - 17. MIC 2:** microphone input with 6.35 mm jack. For both wired microphones and wireless microphones with jack receiver.
 - 18. MIC 1:** microphone input with 6.35 mm jack. For both wired microphones and wireless microphones with 6.35mm jack receiver.
 - 19. POWER:** press ON to turn on the device and OFF to turn it off.
 - 20. Bluetooth mode activation:** You can connect a device via Bluetooth to playback music. BT works at a maximum distance of 10 meters. Device Bluetooth identification name: Cantu Tu
 - 21. PREV:** directional key to select a previous file or step.
 - 22. PLAY/PAUSE:** play or pause the music.
 - 23. NEXT:** directional key to select a next file or step.
 - 24. HOME:** key to return to home page.
 - 25. BACK:** key to return to the previous page.
 - 26. EFFECTS:** key to start voice change app (Useful only when using the microphone).
 - 27. MIC PRI:** button to prioritize the microphone. By activating this mode, if you use the microphone while a song is playing, the music will automatically turn down to let you hear what is amplified by the microphone. As soon as you stop talking, playback will resume normally.
 - 28. AUDIO OUT:** key to enable/disable mute function while using headphones or extra speaker with AUDIO OUT 3.5mm jack port. Press the button to enable the sound only from headphones/speaker or also from the machine.
 - 29. LED MODE:** key to select the LED effect, 7 effects are available. Push the key to change the mode.
- CANTU TU PRO DEVICE MEMORY:**
MEMORY 2GB + 32GB DATA STORAGE

 WI-FI CONFIGURATION

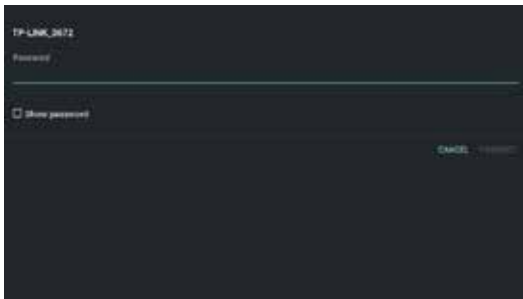

Touch the **SETTING** icon on the home page or press the directional keys on the remote control, until you reach the desired icon, then press the **OK** key. Scroll down the list of functions to select **Wi-Fi** and press **OK** (or select the function by touching the screen). Activate the **Wi-Fi** and select the desired network. Enter the password if required, for connection.

BLUETOOTH® CONNECTION (Canta Tu)



Touch the **Bluetooth** icon from the Home screen or press the **Bluetooth** button on the control panel or on the remote control, to start the Bluetooth connection. Open your device settings in the **Bluetooth** section and select the "Cantu Tu" device.

You can now listen to music files on your device through the Cantu Tu Pro device.

To select the tracks, you can use the device that is connected to Cantu Tu, or the following options:

• CONTROL PANEL

Press the **PREV.** and **NEXT** buttons to choose tracks.

Press the **PLAY/PAUSE** key to pause or restart a paused track.

Press the **HOME** or **BACK** buttons to exit Bluetooth mode.

• REMOTE CONTROL AND TOUCHSCREEN

It is possible to choose a track using the icons on the screen or selecting them with the remote control.

DEVICE SETTINGS

To set the device, use the directional buttons on the remote control or directly touch the **SETTINGS** icon on the screen.

Press the **BACK** key or the arrow icon in the bottom right corner of the screen, to exit a function.

Press the **OK** key on the remote control or tap the screen to enter a function.

You can adjust some functions of the device in the settings section by following the directions on the screen:

DATE and TIME SETTING:

Connecting the machine to WI-FI, date and time will automatically update. If this does not happen, due to connection problems, you can follow these steps:

1 - from the home page, touch **SETTINGS** icon and select

SYSTEM --> DATE & TIME

2 - select **TIME ZONE** and look for your region.

LANGUAGE SETTING:

1 - from the home page, touch **SETTINGS** icon and select

SYSTEM --> LANGUAGES & INPUT, then LANGUAGES.

2 - Continue with **ADD A LANGUAGE** and choose the desired language. To make it the main language of the device, use your finger to touch the language indicated on the screen and drag it to the first place. The language will automatically change.

To back up your data and files, or go to factory data reset, go to

SYSTEM --> BACKUP or RESET OPTIONS.

STAND BY MODE

Default stand by mode in 30 mins and you can change the time slot to never, 1 hour or 2 hours in

SETTING --> DISPLAY --> SCREEN TIMEOUT.

 
You can wake up the machine by either using **Power** button on remote control, touching the screen or pushing one of the buttons (except **LED** button) on control panel.

MEDIA PLAYER



Media: from the **Homepage**, select the **Media** icon, then insert a USB flash drive or mini-SD card and touch the screen to select one of the options (see image) depending on the support you want to play. Select **PICTURE, MUSIC or VIDEO**, depending on what you want to play. The list of the files available will appear. Select a file, then the playback will follow the order of the file on the support.

VIDEO PLAYER

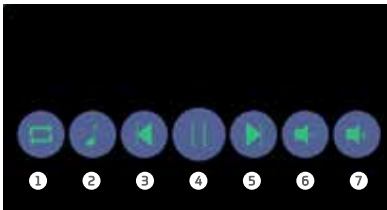

To go back to the play list, press **BACK** (or the arrow icon in the bottom right corner), then choose the desired file."

Tap icon 1 to select the playback mode: single loop, random play, list loop.

Tap icon 2 to select the stereo channel.

Press the PREV. or NEXT buttons, or use **icons 3 and 5** on the screen, to playback the previous or next track.

Press the PLAY/PAUSE button, or use **icon 4**, to pause or play a track.

To set the volume, use the knobs, the **remote control** or use the **icons 6 and 7**.

Press the **HOME** key to exit the playback mode.

USING APPLICATIONS

MY APP

Select the MY APP icon from the HOME PAGE. This section contains all the apps installed on the equipment.

Apps can be downloaded from Google Play with a dedicated account, or from the App Manager, that you can find in MY APP.

In the App Manager you can find a list of suggested apps you can install and update. Simply find the desired app, then follow the prompt steps.

Warning! Some apps may not be compatible with the Android version installed on the equipment and, therefore, you might not be able to either download or update them.

Explorer: select EXPLORER in MY APPS section, to check the available storage and the files available on Canta Tu Pro device, USB or mini-SD car device.

You can delete, copy, and move files from local, USB, and mini-SD card storage to your desired location. Long press on the file you want, select COPY or MOVE, then switch to your desired location. Touch on EDITOR, and select PASTE.

Note: if you exit Explorer after selecting file copy/move, you will need to repeat the steps again before you can paste it.



YouTube, Google Play, Google Chrome are pre-installed apps and cannot be uninstalled.

To uninstall other apps, long touch the icon and follow the instructions.

Android mirroring: with this app is possible to start the mirroring function on Canta Tu Pro for Android operated devices.

Activate the Wireless Projection function on your device. Tap on SEARCH icon on Canta Tu screen to look for your device.

iOS mirroring: with this app it is possible to start the mirroring function on Canta Tu for iOS operated devices.

Activate the Wireless Projection on your device. Canta Tu will connect to your device automatically. You will see CantaTu in your Screen Mirroring list.

Is now possible to see the screen of your device on Canta Tu screen.

Consult the instruction manual of your device to activate the wireless projection. The procedure may vary depending on the different models.

Both Android and iOS mirroring can work only if Canta Tu device and the other device are both connected to the same WI-FI connection.

VOICE EFFECTS

Selecting this app you can choose between some voice effects that will be applied on all the microphones connected to Canta Tu device.

If you want to go back to the original voice, after selecting an effect, select ORIGINAL.

You can also activate this app pressing the button EFFECTS on the control panel.

REMOTE CONTROL



- 1. POWER:** turn on/off the device standby mode.
- 2. PLAY/PAUSE:** play or Pause the music.
- 3. OK (Enter/Select/Mouse Left):** key to confirm the selection, like mouse left key
- 4. MOUSE ON/OFF:** press to open air mouse function, press it again to close
- 5. DIRECTIONAL KEYS:** keys to move UP-DOWN-LEFT-RIGHT
- 6. HOME/RETURN:** long press to back to homepage, one press to go back to previous page. Right mouse key
- 7. MENU:** open menu options. (Useful only when using the Media player)
- 8. PAGE:** key to go to the next or previous page (Useful only when using the website or some files).
- 9. VOLUME:** Key to increase or decrease the main volume.
- 10. DEL:** delete inputted content
- 11. MUTE:** mute volume
- 12. BLUETOOTH:** key to open Bluetooth mode
- 13. BATTERY INDICATOR:**

The red-light flashes slowly when the AAA batteries power is lower than 2v. It means that the batteries need to be replaced

REMARK: button keys on remote control cannot work on some apps, need to use the air mouse to operate.

 
 
New Remote Control Pairing

If you have a new remote control, you can pair it with your Cantu Tu Pro device by following steps:


- Put remote control close to the device.
- Press and hold OK button and HOME button, then the red light will flash.
- Pairing is successful when red light stops flashing

Batteries installation

1. For battery installation, push the compartment down to open.
2. Install 2xAAA batteries and make sure they are installed correctly following the +/- printed symbols on the remote control (batteries not included).

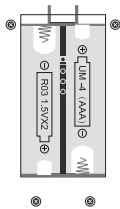

VHF MICROPHONE

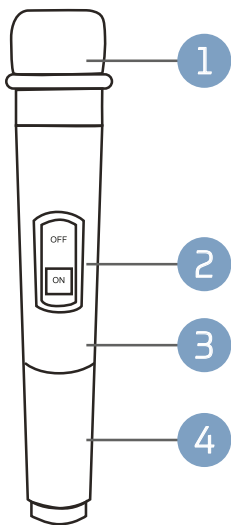 


- 1. Diaphragm:** speak into the diaphragm to convey the voice to the Canta Tu Pro system.
- 2. Switch: ON/OFF:** use this switch to turn on the microphone (ON), or switch it off (OFF).
- 3. Transmitter:** keep the transmitter pointed toward the Canta Tu system. Remove any obstacles to improve reception. Range up to 10 m.
- 4. Battery compartment:** turn clockwise to open and install 2 AA batteries (batteries not included).



BATTERIES INSTALLATION

 - To install batteries, open the compartment at the bottom of the microphone by turning clockwise



- Insert 2 AA batteries, making sure to observe the correct +/- polarity. Follow the symbols indicated in the battery compartment of the microphone (batteries not included).

WARNING! This wireless microphone is programmed to be compatible with the model Canta Tu Pro and it is set on the frequency range 2402MHz-2480MHz.

The potential compatibility with other devices must be checked by the user.

This Canta Tu Pro system is programmed to be compatible with and work with a second Canta Tu Pro wireless microphone with frequency range 2402MHz-2480MHz, which is sold separately.

The microphone with item code CTC07000, that is compatible with the first model Canta Tu HY-2110 cannot work with Canta Tu Pro.

For optimal operation, always use Canta Tu branded microphones and products.

NOTE: The Canta Tu Pro equipment features two built in frequencies to work simultaneously with 2 wireless Canta Tu Pro microphones. Two additional input ports (MIC 1 and MIC 2) are available on control panel for either wired microphones or Canta Tu Pro microphones with receiver. Canta Tu Pro works with maximum 6 Canta Tu Pro microphones simultaneously.

TROUBLESHOOTING GUIDE

1. Machine is not turning on

The battery may be depleted. Be sure to charge the machine after use.

2. Microphone is not turning on

The microphone batteries may be depleted. Replace the batteries.

3. Touch screen is not working

Turn off the power and then turn it back on. If the problem doesn't solve, contact the After Sales Service

4. USB or TF mode is not working.

Ensure that the device is set to the right mode by going to the MEDIA PLAYER app and pressing the icon for your selected input. Alternatively, try unplugging either the USB or TF from the machine and turning it off. Turn the machine back on, plug the USB or TF back in, enter the MEDIA PLAYER app on the touch screen, and press the icon for your selected input.

5. Machine powers on and then shuts down

Charge the machine.

6. No sound is playing from the speaker

Ensure that the volume on the machine, remote control, and your device (if connected to Canta Tu) are all turned to an audible level. Also check whether you are on MUTE by pressing MUTE on remote control, or the AUDIO OUT button on the control panel.

7. Button or knob on the machine/remote control is not working properly

Power off the machine and turn it back on.



WARNING: NOT USING THE ORIGINAL POWER CABLE AND BATTERY CHARGER MAY CAUSE FIRE, ELECTROCUTION OR OTHER HAZARDS.



©Giochi Preziosi S.p.A. 1992
Canta Tu ® | Canta Tu Karaoke® owned by Giochi Preziosi S.p.A.

