



MANUALE DI ISTRUZIONI
INSTRUCTION MANUAL

CTC26000



MANUALE DI ISTRUZIONI PER IMPIANTO AUDIO-VIDEO CANTA TU KARAOKE CON WI-FI E TOUCH SCREEN

INSTRUCTION MANUAL FOR CANTA TU KARAOKE AUDIO-VIDEO SYSTEM WITH WI-FI AND TOUCH SCREEN



**IT - INQUADRA IL QR CODE PER VISIONARE I TERMINI DI UTILIZZO E
SCARICARE LA VERSIONE PIÙ AGGIORNATA DI QUESTO MANUALE.**

NOTA: il presente manuale d'uso è soggetto a costanti aggiornamenti e modifiche, è dunque necessario visionarne la versione più aggiornata e consultare la dichiarazione di Conformità e i Termini di utilizzo, inquadrando il QR code, o consultando il link: <https://giochipreziosi.it/condizioni-canta-tu/>

**EN - FRAME THE QR CODE TO SEE THE TERMS OF USE AND TO DOWNLOAD
THE MOST UPDATED VERSION OF THIS INSTRUCTION MANUAL.**

NOTE: This manual is subject to constant changes and revisions, for this reason is necessary to check the most updated version, consult the Declaration of Conformity and the Terms of Use, framing the QR code, or visiting the website: <https://giochipreziosi.it/condizioni-canta-tu/>

WARNINGS

Failure to comply with safety regulations and rules could lead to serious injury and death.

WARNING: This device is not a toy, it can be used by children aged 8 and up and by people with limited physical or mental abilities or with limited knowledge and experience, only if they have been instructed on how to use it and understand the risks and dangers involved.

People with limited physical or mental abilities or with limited knowledge and experience, or animals, could suffocate on swallowing small parts. Always supervise such individuals if they use the device or its accessories under your responsibility.

The use of original accessories, including the power cable and the battery charger, is essential to guarantee the correct functioning and safe use of the equipment, and also in order to avoid danger to people or things. The company explicitly declines any liability in the event of the equipment being used in ways that do not comply with the safety measures set out in these instructions.

Before using the product, read the instructions on its proper use carefully. Keep the instructions because they contain important information.

General Warnings

- **Magnets** - The equipment contains magnets. Make sure to keep a safe distance between the equipment and objects that might be affected by magnets, such as credit cards or implantable medical devices (e.g., pacemakers). If you are wearing an implantable medical device, ask your doctor before using the equipment. Do not store the equipment near magnetic fields.
- **Radio frequency** - If you are wearing a hearing aid, contact the manufacturer for information regarding radio frequency. Do not use the equipment near devices or systems that emit radio frequencies, such as sound systems or sound towers. Do not use the device in healthcare environments, on aircraft or automobile systems that might be affected by radio frequency interference.
- **Explosions** - Switch off the equipment in potentially explosive environments.
- **Safety rules in case of non-use of the equipment or thunderstorms** - If the equipment is not in use (even for a short time) or if there is a thunderstorm, unplug the power cable and the battery charger from the power socket. This safety measure is essential to avoid any risk of damage to the equipment, things or people, deriving, for example, from overheating, overvoltage or lightning.
- **Cleaning** - Do not use liquid or spray cleaners. Use a dry cloth to clean only the outside of the product.
- **Overload** - Do not overload power sockets, extension cords or built-in power sockets, as this may cause fire or electrocution.
- **Foreign bodies and liquids** - Do not insert any kind of object into the openings of the equipment, as it could come into contact with dangerous voltage points or short-circuit some components. This could cause fire or electrocution. Keep the equipment dry. Do not spill liquids on the equipment. Do not touch the equipment, power cables, plugs and power socket with wet hands or other body parts to avoid electrocution. Do not use the equipment outdoors during a thunderstorm.

- **Repairs and maintenance** - Do not attempt to carry out maintenance work yourself, as removing or opening covers could release dangerous voltages or create other risks. Allow maintenance work to be carried out by qualified technical personnel
- **Damage requiring maintenance** - Unplug the power plug from the power socket and contact Customer Service for assistance if the following situations occur:
 - a) if power cable or plug are damaged;
 - b) if liquids have been spilled or objects have fallen on the equipment;
 - c) if the product has been exposed to rain or water;
 - d) if the product was dropped or is damaged;
 - e) if the product performs significantly below standard.
- **Spare Parts** - Do not use power cables, damaged power plugs or loose power sockets. If spare parts are required, contact Customer Service for assistance and, in any case, make sure to use only original and undamaged spare parts, including the power cable and the battery charger. Using inadequate replacements may cause fire, electrocution or other risks.
- **Heat** - The equipment can be used in venues with ambient temperature between -10°C and 40°C. You can store the equipment at ambient temperature between -15°C and +40°C. Using and storing the equipment outside the recommended temperature limits may cause damage to the equipment, property, animals or people, or shorten battery life
- **Transport** - The equipment must not be dragged or used on sand or rough dirt and rough roads (ex. Stones, pebbles...).

Warnings for the usage environment

- The equipment may overheat due to different environmental conditions. Take care to avoid shortening battery life, causing damage to the equipment or fire.
- Do not store the equipment at either too low or too high temperatures.
 - In case you keep the device for in low temperatures for a long time, it is preferable to bring it back to a temperature of at least 15 before use, so that the performance is not affected.
 - Do not expose the equipment to direct sunlight for long periods of time.
 - Do not use and do not store the equipment for long periods of time in very hot areas, e.g., inside a hot car.
 - Do not place the device in areas that could overheat, such as a heating mat.
 - Do not store the equipment near heat sources, such as radiators, convection heaters, microwave ovens, hot cooking devices, high pressure containers or other products (including amplifiers).
 - Do not use cables, whose casing is either worn or damaged, and do not use damaged or malfunctioning chargers or batteries.
 - Do not use Canta Tu in a humid environment, and do not expose to salty environments.

Precautions against overheating the equipment

If you start feeling any discomfort due to the equipment overheating, stop using it.

In case of overheating, equipment function and performance may be limited or the equipment itself may shut down for cooling. The feature is only available on supported models.

- Screen brightness and performance speed will be reduced, and battery charging will be interrupted to lower equipment temperature. Until the equipment has cooled down, running applications will be closed and all functions will be limited.
- Do not use the equipment until its temperature falls below the specified level.

When the equipment overheats during use

When using more energy-intensive features or applications, or when using them for long periods of time, the equipment may temporarily overheat due to excessive battery consumption. Close any running applications and do not use the equipment for a while.

Please refer to the following examples of situations in which the equipment may overheat

- During initial configuration after purchase or data restoration.
- When downloading large files.
- When using more energy-intensive applications, or when using applications for long periods of time.
- When playing high resolution games for long periods of time.
- When streaming videos with brightness set to maximum.
- When connecting to a TV.
- When using a large volume of data when synchronizing with Cloud, email or other accounts.
- When using the equipment in areas with a weak signal or no signal at all.
- When charging the battery with a damaged cable.
- If the equipment's multifunction connector is damaged or exposed to foreign materials, such as liquids, dust, metal powders and pencil lead.

If the equipment overheats, adopt the following solutions:

- conflict between running applications may cause the equipment to overheat;
- restart the equipment;
- disable Wi-Fi and Bluetooth when not in use;
- close applications that increase battery consumption or run in the background when not in use;
- delete unnecessary files and unused applications;
- reduce screen brightness;
- if the equipment overheats or feels hot to the touch for an extended period of time, do not use it for a few minutes. If the equipment continues to overheat, contact Customer Service for assistance.
- Disconnect the charger from the equipment and close any running applications.
- Wait for the equipment to cool down, then resume charging.
- If the bottom of the equipment is overheated, the cause could be a damaged connection cable. Contact Customer Service for assistance.

When the equipment overheats while charging the battery

During charging, the equipment and charger may overheat. This does not affect the life or performance of the equipment and is part of its normal operation. If the battery gets too hot, the charging speed may decrease or the charger may stop charging.

Precautions when using the equipment

• When using the equipment, read this Manual to ensure safe and correct use.

- The descriptions are based on the equipment's default settings. Do not change the registry settings or the operating system of the equipment. The manufacturer is not liable for performance problems or incompatibilities caused by changing registry settings or operating system software. Modifying the equipment's operating system or installing software from unofficial sources may cause the equipment to malfunction and data damage or loss.
- Handle the equipment and charger with care.
- Do not put the equipment, charger or supplied accessories in your eyes, ears or mouth.
- Do not connect the positive and negative poles of the charger directly to each other.
- Do not paint or stick stickers on the equipment or its accessories. Install the equipment and its accessories carefully.
- Do not pull too hard on the power cable when disconnecting it.
- Do not bend or damage the power cable during use or when storing it in the package.
- Do not drop the equipment or its accessories and avoid impact.
- Clean the equipment and its accessories only with a soft cloth and without detergents or chemicals.
- Do not expose the equipment or its accessories to dust, sand, sweat, ink, oil and chemicals, such as cosmetics, antibacterial sprays, hand cleaners, detergents and pesticides.
- Do not use the equipment or its accessories for purposes other than those intended.
- Avoid disturbing others (people or animals) when using the equipment in their presence.

Internet connection

- To allow full operation of the equipment, you need the availability of a connection to a Wi-Fi Internet network (including via mobile hotspot), which may incur additional costs depending on your tariff plan.
- If you are in areas with weak signal or poor reception, the equipment may not work. Connectivity problems could be due to problems with the telephone operator, especially if you use the equipment while travelling.

Malware and virus

- The equipment does not feature antivirus or anti-malware software.
- To protect your equipment from malware and viruses, please follow the usage tips given below to avoid the risk of causing damage or data loss:
 - do not download unknown and non-certified applications;
 - do not visit untrustworthy websites;
 - if you access your inbox using this device, be careful to delete suspicious messages and emails from unknown senders;
 - deactivate the Bluetooth function when not in use.

Data loss

- The manufacturer is not liable for any loss, damage or dissemination of data stored on the equipment or uploaded on the Internet via the equipment.
- The manufacturer is not liable for the loss, interception or misuse of data sent or received via the equipment.
- Protect personal data to prevent accidental loss or misuse of information that may be on the equipment.
- When using the equipment, be sure to back up data you consider important.
- When disposing of the equipment, back up all data, then reset the equipment to avoid misuse of your personal information.
- Always verify that you are sharing and receiving data from trusted and adequately protected sites and devices.
- Some applications may require the creation of personal accounts and/or access to or use of existing accounts in order to function properly. The manufacturer is not responsible for the content, mode of operation and performance problems of the applications, regardless of whether these applications are already loaded on the equipment or are subsequently downloaded by the user. The default applications supplied with the equipment are subject to updates and may no longer be supported without notice.
- If you do not create such accounts or do not grant permissions to the applications, the basic functions of the applications may not function properly.
- When downloading an application, carefully read the screen of required authorizations.
- Pay particular attention and caution to applications that require access to multiple equipment functions or personal information.
- Regularly check that your accounts are not subject to unauthorized access.
- In case of traces of unauthorized access to your personal information or accounts, contact your manager for any appropriate remedial action.
- In the event of loss or theft of your equipment, promptly change your account credentials.

Minora | Parental control

ATTENTION: With this device, you can set the parental control and manage the child's experience. You can limit the access to certain app, set the using time and other options, to guarantee a safe use of the device while entertaining the children.

Please follow this steps to set this option:

Settings --> Digital wellbeing & parental controls --> Set up parental controls

The equipment is not intended for minors, and must always be used by minors in the presence of a responsible adult. It is the sole responsibility of the user to monitor the proper use of the equipment by minors and to determine the need to block or restrict certain applications downloaded on the equipment.

It is recommended to enable parental control on the equipment via the appropriate App features, in order to:

- set content and privacy restrictions;
- prevent app or online purchases;
- limit the use of apps and built-in functions;
- limit apps and games;
- limit the time of use of the equipment by the minor (only for application use and Web access);
- prevent the vision of websites, playing music, films or TV programmes, with explicit or adult contents;

- control which apps have access to information on the equipment or hardware features;
- limit the content that can be downloaded or purchased on the equipment, considering the user's level of maturity.

MICROPHONE INFORMATION

General warnings

- **Magnets** - The microphone contains magnets. Make sure to keep a safe distance between the microphone and objects that might be affected by magnets, such as credit cards or implantable medical devices (e.g., pacemakers). If you are wearing an implantable medical device, ask your doctor before using the equipment. Do not store the equipment near magnetic fields.
- **Radio frequency** - If you are wearing a hearing aid, contact the manufacturer for information regarding radio frequency. Do not use the equipment near devices or systems that emit radio frequencies, such as sound systems or sound towers. Do not use the equipment in healthcare environments, on aircraft or automobile systems that might be affected by radio frequency interference.
- **Explosions** - Turn off the microphone in potentially explosive environments.
- **Cleaning** - Do not use liquid or spray cleaners. Use a dry cloth to clean the product.
- **Foreign bodies and liquids** - Do not insert any kind of object into the microphone, as this could come into contact with dangerous voltage points or cause a short circuit of some components. This could cause fire or electrocution. Keep the microphone dry. Do not spill liquids on the microphone. Do not touch the microphone with your hands or other wet body parts to avoid electrocution. Do not use the microphone outdoors during a thunderstorm.
- **Repair and maintenance** - Do not attempt to carry out maintenance work yourself, as removing or opening covers could release dangerous voltages or create other risks. Allow maintenance work to be carried out by qualified technical personnel.
- **Damage requiring maintenance** - Contact Customer Service for assistance if the following situations occur:
 - a) if liquids have been spilled or objects have fallen on the device;
 - b) if the product has been exposed to rain or water;
 - c) if the product is dropped or damaged;
 - d) if the product performs significantly below standard.
- **Heat** - The microphone can be used in locations with an ambient temperature between -10°C and 40°C. You can store the microphone at an ambient temperature of -15°C to +40°C. Using and storing the microphone outside the recommended temperature limits could result in damage to the microphone, property, animals or people, or reduce battery life.

Information on batteries

Non-rechargeable batteries must not be recharged. Rechargeable batteries (if removable) must be removed from the product before recharging. Different types of batteries or new and used batteries must not be mixed. Do not try to open batteries. Do not throw batteries into a fire, they may explode or leak. Remove the batteries from the microphone if you intend to store it or not use it for a long time. It is the sole responsibility of the user to monitor the proper use of the equipment by minors and to determine the need to block or restrict certain applications and functions on the equipment.

Copyright

Copyright © 2023 Giochi Preziosi S.p.A.

- This Manual is protected by international copyright laws.
- No part of this Manual may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any information repository or retrieval system.
- The software, sounds, wallpapers, images, applications and other multimedia content supplied with the device are the property of the copyright holders. Downloading and using these materials for commercial or other purposes is a violation of copyright laws. Full responsibility for unlawful use of media content lies with the users.
- Do not distribute copyright-protected material through the device without the permission of its owners. This may constitute a violation of copyright laws. The manufacturer is not liable for any legal disputes arising from the use of copyrighted material by the user of the device.
- Do not use the Internet connection and Bluetooth® function for illegal purposes (e.g., pirate copies of files or illegal recording of communications for commercial purposes).
- The manufacturer is not liable for illegal use of the device.

Trademarks

- Giochi Preziosi® and “Canta Tu” are registered trademarks of Giochi Preziosi S.p.A.
- Bluetooth® is a worldwide registered trademark of Bluetooth SIG, Inc.
- Wi-Fi®, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance.
- YouTube® is a trademark owned by Google LLC.
- All other trademarks and copyrights are the property of their respective owners.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



INFORMATION FOR USERS OF ELECTRICAL APPLIANCES (DIRECTIVE 2012/19/EU): the symbol of the crossed-out wheeled bin indicates that the equipment at the end of its life is not general municipal waste and the consumer should take it to the special waste collection points in their municipality. The correct disposal of waste helps to avoid possible negative effects on the environment and health, and also promotes the reuse and/or recycling of the materials from which the equipment is made. For more information on special waste collection, please contact your local authorities.

Declaration of Conformity

The Manufacturer Giochi Preziosi S.p.A. declares that the type of radio equipment

CTC26000 CANTA TU KARAOKE PORTABLE

complies with Directive 2015/53/EU.

The full text of the EU Declaration of Conformity is published on the website: <https://giochipreziosi.it/condizioni-canta-tu/>

 
UK
CA



NOTE: This manual is subject to constant changes and revisions, for this reason is necessary to check the most updated version, consult the Declaration of Conformity and the Terms of Use, framing the QR code, or visiting the website: <https://giochipreziosi.it/condizioni-canta-tu/>
In the same website are also available all the information and procedures related to Canta Tu Customer Service.

For more information, please contact **Customer Service** on: **02 9646 11 70**

RAPID GUIDE

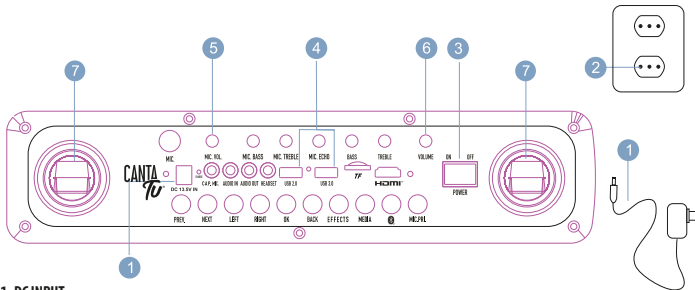

1- DC INPUT

To charge the Cantu Tu audio-video system, insert the socket of the battery charger included in the package here.

2- POWER SOCKET

Plug the battery charger into a power socket (100V-240V) and start the charging process. Check that the charger indicator is red: it means the equipment is being charged. It takes about 5 hours to fully charge the system. Once is fully charged, the light turns green.

3- POWER ON/OFF

Press the switch to turn on (and then to turn off) the equipment.

4- USB/3.0 AND USB/2.0

Insert a flash drive into the USB port, you can select files from the screen or using the buttons

5- MIC.VOL.

Use the knobs to adjust mic volume, mic bass, mic treble and mic echo, as desired.

6- VOLUME

Use the knobs to adjust volume, treble and bass, as desired.

7- NO-SLIP SILICONE SLEEVES FOR MICROPHONES

Included in the pack you can find 2 silicone sleeves to be put inside the Cantu Tu microphone holes, to avoid falling during the machine handling.

ATTENTION! When using the Cantu Tu Portable for the first time, after connecting to the wi-fi network, it is necessary to log-in to the Google Play Store, using your personal account. This step is necessary for a proper use of the Cantu Tu machine and of all the applications installed.

TECHNICAL FEATURES:

SCREEN DIMENSION: 14.1"

SPEAKER POWER: 40W RMS

SPEAKER: 2x4" WOOFER

CANTU TU DEVICE MEMORY:

MEMORY 2GB + 32GB DATA STORAGE

HOME PAGE

Canta Tu settings icons are displayed on the Homepage. Use the RIGHT/LEFT buttons on control panel to choose the desired function on the HOME PAGE, then press OK, or directly touch the icon on the screen and follow the instructions.

No Internet connection is needed for Bluetooth, AUX, USB Flash Drive and TF Card to work.

A WI-FI/Internet connection is required to run YouTube, Google Play and any other apps in the "My Apps" section.



DEVICE SETTINGS

To set the device, use the directional buttons on the control panel or directly touch the SETTINGS icon on the screen. Press the BACK key or the arrow icon in the bottom right corner of the screen, to exit a function. Press the OK key on the control panel or tap the screen to enter a function.

You can adjust some functions of the device in the settings section by following the directions on the screen:

DATE and TIME SETTING:

Connecting the machine to WI-FI, date and time will automatically update. If this does not happen, due to connection problems, you can follow these steps:

- 1 - from the home page, touch SETTINGS icon and select SYSTEM --> DATE & TIME
- 2 - select TIME ZONE and look for your region.

LANGUAGE SETTING:

- 1 - from the home page, touch SETTINGS icon and select SYSTEM --> LANGUAGES & INPUT, then LANGUAGES.
- 2 - Continue with ADD A LANGUAGE and choose the desired language. To make it the main language of the device, use your finger to touch the language indicated on the screen and drag it to the first place. The language will automatically change.

 
BACKUP and RESET:

to back up your data and files, or go to factory data reset, go to SYSTEM --> BACKUP or RESET OPTIONS.

STAND BY MODE

Default stand by mode in 30 mins and you can change the time slot to never, 1 hour or 2 hours, in SETTING --> DISPLAY --> SCREEN TIMEOUT. You can wake up the machine by either touching the screen or pushing one of the buttons on control panel.

CONTROL PANEL

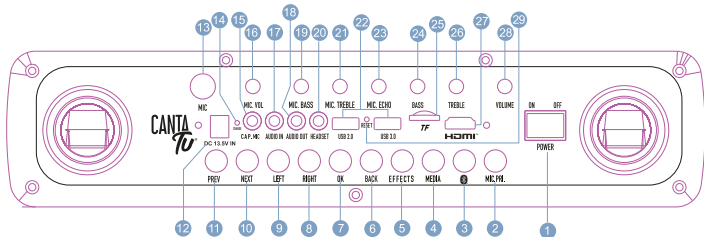

- 1. POWER:** press ON to turn on the device and OFF to turn it off.
- 2. MIC. PRI. :** button to prioritize the microphone. By activating this mode, if you use the microphone while a song is playing, the music will automatically turn down to let you hear what is amplified by the microphone. As soon as you stop talking, playback will resume normally.
- 3. Bluetooth:** Bluetooth mode activation. You can connect a device via Bluetooth to playback music. BT works at a maximum distance of 10 meters. Device Bluetooth identification name: Cantu Tu.
- 4. MEDIA:** press MEDIA on the touch screen, or push the button to play the tracks in the USB/TF.
- 5. EFFECTS:** key to start voice change app (Useful only when using the microphone).
- 6. BACK:** key to return to the previous page.
- 7. OK:** key to confirm the selection, or enter a selected app.
- 8. RIGHT:** key to right.
- 9. LEFT:** key to left.
- 10. NEXT:** directional key to select a next file or step, or to GO DOWN.
- 11. PREV.:** key to up or directional key to select a previous file or step, or to GO UP.
- 12. DC 13,5V IN:** charging interface. Plug in the battery charger when the Cantu Tu audio-video system has a low battery level.
- 13. MIC.:** microphone input with 6.35 mm jack. For both wired microphones and wireless microphones with 6.35mm jack receiver.
- 14. CHARGE:** charging indicator (it is red if the device is charging). The indicator light will automatically change to green when charging is complete). Approximate charging time: 4-5 hours.
It is recommended that the device should be charged using only the power cable and battery charger included in the box, or original spare parts in good condition.
- 15. CAP.MIC.:** jack input 3,5mm for wired capacitance microphones or Lavalier microphones.
- 16. MIC.VOL.:** use this knob to adjust the microphone volume. Turn to the left to lower the volume, and to the right to raise it.
- 17. AUDIO IN:** audio in to connect mobile/tablet with 3.5 mm Aux cable. After connecting, you can transmit the music from your device to the machine for playback.
- 18. AUDIO OUT:** audio output to connect another speaker with 3.5 mm AUX cable and it is also suitable for connecting headphones or other audio devices. Using headphones, the sound will be enabled both from speaker and headphones.

- 19. MIC. BASS:** use this knob to adjust the BASS of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).
- 20. HEADSET:** to connect headphones with 3,5mm jack. The audio playing from the machine and from the microphone will be heard only in the headset.
- 21. MIC. TREBLE:** use this knob to adjust the TREBLE of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).
- 22. USB 2.0 and USB 3.0:** play audio/video files via USB in media app.
- 23. MIC.ECHO:** use this knob to adjust the ECHO effect of the microphone. Turn to the left to reduce it, and to the right to increase it. (Useful only when using the microphone).
- 24. BASS:** use this knob to adjust the volume of the BASS. Turn it to the left to lower the volume, or to the right to raise it.
- 25. SD CARD:** mini SD/TF card port. Insert a mini SD/TF card to play audio and video files.
- 26. TREBLE:** use this knob to adjust the volume of the TREBLE. Turn it to the left to lower the volume, or to the right to raise it.
- 27. HDMI OUTPUT:** HDMI output allows to connect the Cantu Tu device to the TV. The AUDIO will be played by Cantu Tu machine and not from the TV device.
- 28. MUSIC VOLUME:** use this knob to adjust the main volume. Turn to the left to lower the volume, and to the right to raise it.
- 29. RESET:** use the RESET function to go back to factory functions. Insert a needle in the hole and simultaneously power on the Cantu Tu machine, then exit the needle when you will see on the screen a list of functions. Use NEXT/PREV buttons on control panel to select Wipe data / factory reset. Use the RESET function to go back to factory functions. If you need further assistance contact the After Sales Service.

WI-FI CONFIGURATION



Select the SETTING icon on the home page and scroll down the list of functions to select Wi-Fi and press OK. Activate the Wi-Fi and select the desired network. Enter the password if required, for connection.


BLUETOOTH® CONNECTION (Canta Tu)



Touch the Bluetooth icon from the Home screen or press the  button on the control panel to start the Bluetooth connection. Open your device settings in the Bluetooth section and select the "Canta Tu" device. You can now listen to music files on your device through the Canta Tu speaker. To select the tracks, you can use the device that is connected to Canta Tu, or the following options:

-control panel

Press the PREV and NEXT buttons to choose tracks.

Press the , or BACK buttons to exit Bluetooth mode.

-touchscreen

It is possible to choose a track using the icons on the screen.

MEDIA PLAYER



Media: from the **Homepage**, select the **Media** icon, then insert a USB flash drive or mini-SD card and touch the screen to select one of the options (see image) depending on the support you want to play.

Select **IMAGE**, **MUSIC** or **VIDEO**, depending on what you want to play. The list of the files available will appear. Select a file, then the playback will follow the order of the file on the support.

To go back to the play list, press **BACK** (or the arrow icon in the bottom right corner), then choose the desired file.

In case you cannot open a Multimedia file, it is possible to try to change the decoding method (Hardware/Software), pre-set in Canta Tu machine, going to: Media – Setting - Play Setup - hardware decoding or software decoding.

Sometimes the file cannot be read, if it is not supported by Canta Tu machine.

Supported files are: **MP4, AVI, RMVB, MOV, MKV, 3GP, ETC**

VIDEO PLAYER



Press the **PREV.** or **NEXT** buttons or tap **icons 1** and **3** on the screen, to playback the previous or next track.

Press the **PLAY/PAUSE** button or tap **icon 2**, to pause or play a track.

Tap **icon 4** to select the stereo channel.

Tap **icon 5** to select the playback mode: single loop, random play, list loop.

To go back to the play list, press **BACK** (or the arrow icon in the bottom right corner) or tap **icon 6**, then choose the desired track/file.

USING APPLICATIONS

MY APP

Select the MY APP icon from the HOME PAGE. This section contains all the apps installed on the equipment.

Apps can be downloaded from Google Play Store with a dedicated account.

Warning! Some apps may not be compatible with the Android version installed on the equipment and, therefore, you might not be able to either download or update them.

File Explorer: select File Explorer in MY APP section, to check the available storage and the files available on Canta Tu device, USB or mini-SD card device.

To manage the files on the machine, it is possible to use the App FILES, available in MY APP section. To delete a file, select it, then push on the trash bin icon; for other options, please select for each file the 3-dots icon on the right of the screen and proceed choosing the options suggested.



Youtube, Google Play, Google Chrome are pre-installed apps and cannot be uninstalled.

To uninstall other apps, long touch the icon and follow the instructions.

Android mirroring (WifiDisplay): with this app is possible to start the mirroring function on Canta Tu for Android operated devices.

Activate the Wireless Projection function on your device. Tap on SEARCH icon on Canta Tu screen to look for your device.

IOS mirroring (AirplayMirroring): with this app is possible to start the mirroring function on Canta Tu for IOS operated devices.

Activate the Wireless Projection on your device. Canta Tu will connect to your device automatically. You will see Canta Tu in your Screen Mirroring list.

Is now possible to see the screen of your device on Canta Tu screen.

Consult the instruction manual of your device to activate the wireless projection. The procedure may vary depending on the different models.

Both Android and IOS mirroring can work only if Canta Tu device and the other device are both connected to the same WI-FI connection.

 
VOICE EFFECTS

Selecting this app you can choose between some voice effects that will be applied on all the microphones connected to Canta Tu device.

If you want to go back to the original voice, after selecting an effect, select ORIGINAL.

You can activate this app pushing the button EFFECTS on the control panel, or pressing the icon in "MY APP" section.

2.4G MICROPHONE

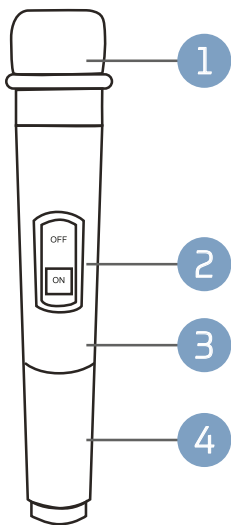

- 1. Diaphragm:** speak into the diaphragm to convey the voice to the Canta Tu system.
- 2. Switch ON/OFF:** use this switch to turn on the microphone (ON) or switch it off (OFF).
- 3. Transmitter:** keep the transmitter pointed toward the Canta Tu system. Remove any obstacles to improve reception. Range up to 10 m.
- 4. Battery compartment:** turn clockwise to open and install 2 AA batteries (batteries not included).



BATTERIES INSTALLATION

- To install batteries, open the compartment at the bottom of the microphone by turning clockwise



- Insert 2 AA batteries, making sure to observe the correct +/- polarity. Follow the symbols indicated in the battery compartment of the microphone.

WARNING! The wireless microphone is programmed to be compatible with this Canta Tu model and it is set on the frequency 2402MHz-2480MHz. The potential compatibility with other devices must be checked by the user. This Canta Tu system is programmed to be compatible with and work with a second wireless microphone with frequency 2402MHz-2480MHz, which is sold separately (Product Code CTC14000). The microphone with item code CTC07000, that is compatible with the first model Canta Tu HY-2110 (code CTC06000), cannot work with this machine. For optimal operation, always use Canta Tu branded microphones and products.

NOTE: This Canta Tu equipment features two built-in frequencies to work simultaneously with 2 wireless Canta Tu microphones. One additional input port (MIC.) is available on control panel for either wired microphones or Canta Tu Pro microphones with receiver (code CTC15000). This machine works with maximum 4 Canta Tu microphones simultaneously.

TROUBLESHOOTING GUIDE

1. Machine is not turning on.

The battery may be depleted. Be sure to charge the machine after each use.

2. Microphone is not turning on.

The Microphone batteries may be low or depleted. Replace the batteries of the microphone.

3. Touch screen is not working.

Turn off the power and then turn it back on. If the problem continues to exist, contact the After Sales Service.

4. USB or TF mode is not working.

Ensure that the device is set to the right mode by going to the Media Player app and pressing the icon for your selected input. Alternatively, try unplugging either the USB or TF from the machine and turning it off. Turn the machine back on, plug the USB or TF back in, enter the Media Player app on the touch screen, and press the icon for your selected input.

5. Machine powers on and then shuts down.

Please charge the machine.

6. No sound is playing from the speaker.

Ensure that the volume on the machine and your device (if applicable) are all turned to an audible level. Also check to see whether you are on MUTE by pressing Audio out on the control panel.

7. Button or knob on the Canta Tu machine is not working properly.

Power off the machine and turn it back on.

8. The apps (Youtube, Google Chrome, Google Play...) cannot be used properly.

Sign in to Google Play, then update the your desired app to latest version. Some apps may not be compatible with Canta Tu system.



WARNING: NOT USING THE ORIGINAL POWER CABLE AND BATTERY CHARGER MAY CAUSE FIRE, ELECTROCUTION OR OTHER HAZARDS.



©Giochi Preziosi S.p.A. 1992
Canta Tu ® | Canta Tu Karaoke® owned by Giochi Preziosi S.p.A.